


**ATTENTION :**

! Démontez les raccords  
type R / RA avant soudure.

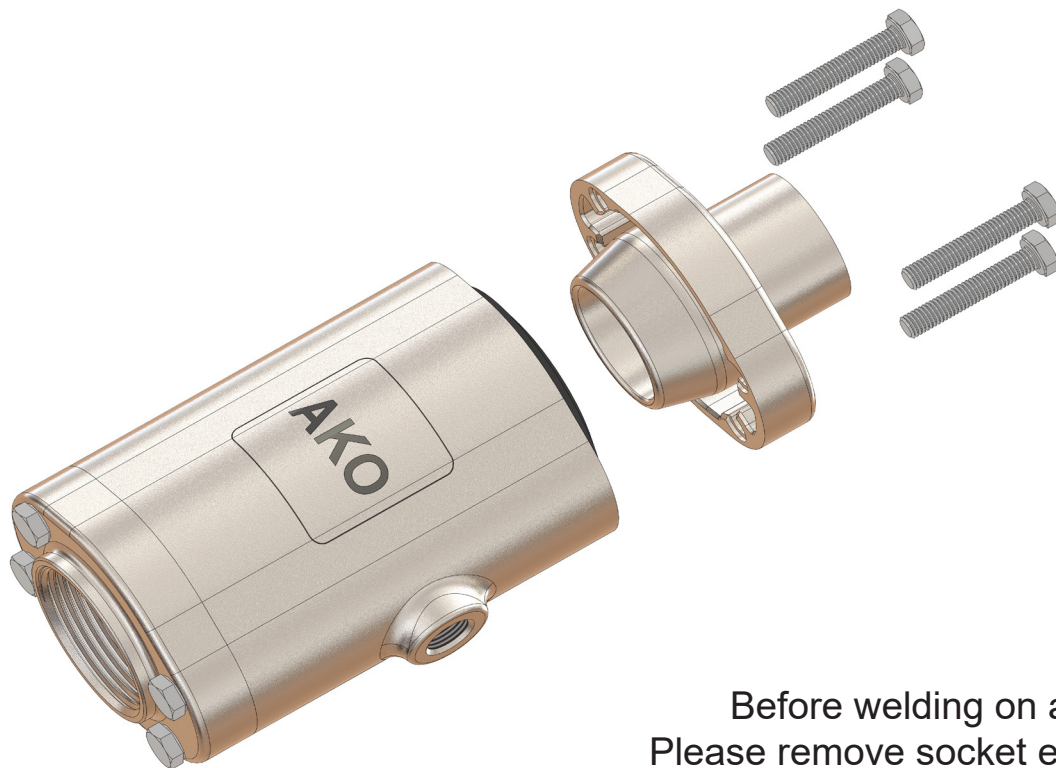

**ADVICE:**

Before welding on adaptations:  
Please remove socket end covers  
type R / RA off the body. !